




1. This is how we deliver Autoflow³ units. Stacked "5 high" in 1 pallet space.

2. Remove one unit from the stack and place where you want to assemble it.



3. Lift first panel, ensure it is pulled back into cleat (A). Repeat with opposite panel.

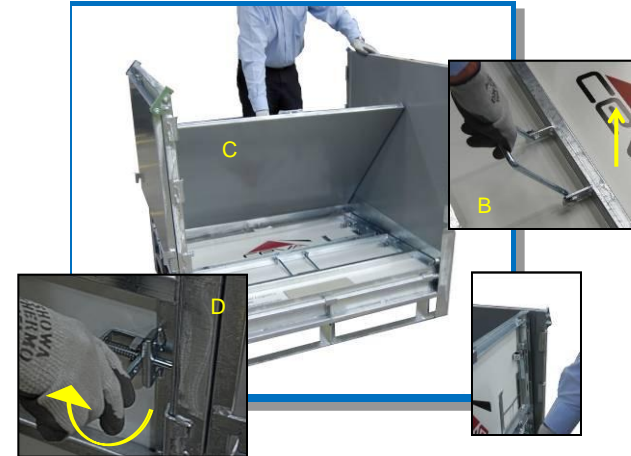

4. Holding the handle (B), pull up panel (C), and close locking bolts (D).



5. For final panel, again pull up using handle and secure with locking bolts (E)



6. Lift and fold over the first Lid. Repeat for Second Lid



7. Slide Lid forwards to Locate correctly. Repeat for Second Lid



8. The Autoflow is now ready for fitting of the liner